

## Aim of project to build a small computer which gcc can use as a target

- use the ATmega328p
  - 32K flash ram, 2K ram
  - cost: £1.95
  - [ATmega USB programmer](http://shop.tuxgraphics.org/electronic/detail_avrusb500smd2.html) ([http://shop.tuxgraphics.org/electronic/detail\\_avrusb500smd2.html](http://shop.tuxgraphics.org/electronic/detail_avrusb500smd2.html))
  - cost: £30.00
  
- other miscellaneous components, resistors, wire, prototype board
  - cost about £4.00

## Why use ATmega processors?

- gcc supports them now and has for about one and a half decades
  - mature compiler
  
- harvard risc architecture
  - the above programmer can program nearly all of these devices


## Atmel ATmega series of microprocessors

- the number of components to make a minimal system is tiny
  
- they are also extremely easy to interface to peripherals
  - A->D, D->A, pwm (servo and motor control) etc
  - multiple hardware timers etc

## Atmel 328p

- is an 8-bit AVR RISC-based microcontroller (some of its features include):
  - 32KB flash memory
  - 1024B EEPROM, 2KB SRAM
  
- 23 general purpose I/O lines
  - 32 general purpose working registers
  - three flexible timer/counters with compare modes
  - internal/external interrupts, a 6-channel 10-bit A/D converter
  - programmable watchdog timer with internal oscillator
  
- many features omitted for sake of brevity

## Simple computer flashing a LED with the ATmega328p

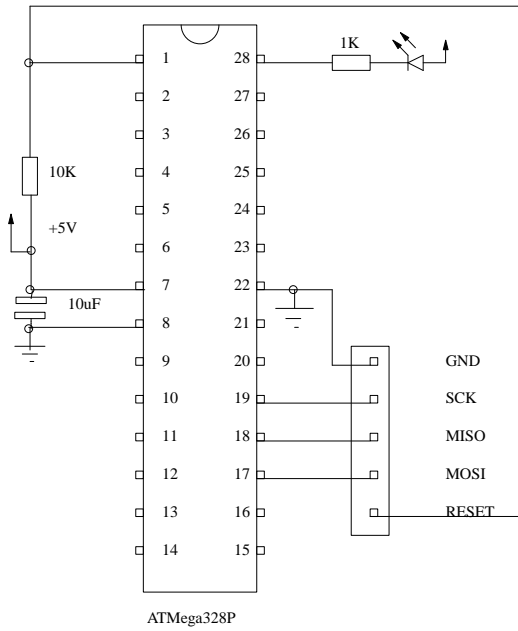

## Packages to install under Debian or Ubuntu

- firstly ensure that floppsie.comp.glam.ac.uk is in the repository:

- /etc/apt/sources.list

```

...
#
# GNU Modula-2 repo
#
deb http://floppsie.comp.glam.ac.uk/debian/ wheezy main
deb-src http://floppsie.comp.glam.ac.uk/debian/ wheezy ma
...

```

## Packages to install under Debian or Ubuntu

```

$ sudo apt-get update
$ sudo apt-get install avrdude gcc-avr gm2-avr

```

## Configure avrdude config file /etc/avrdude.conf

```

default_serial = "/dev/ttyUSB0";

programmer
  id = "avrusb500";
  desc = "tuxgraphics avrusb500";
  type = stk500v2;
;

```

- this ensures that the TuxGraphics programmer can be seen by avrdude
  - double check that this entry is not already in /etc/avrdude.conf

**Build Computer!**

- **build circuit** ([http://flopsie.comp.glam.ac.uk/download/avi/Minimal\\_ATmega328p.vob](http://flopsie.comp.glam.ac.uk/download/avi/Minimal_ATmega328p.vob))

**Build Computer!**

- parts can be found from many sources, eg: **from a kit** ([http://shop.tuxgraphics.org/electronic/detail\\_dotmatrix-board.html](http://shop.tuxgraphics.org/electronic/detail_dotmatrix-board.html))

**Write flashing LED program:  
flashled.mod**

```

MODULE flashled ;

PROCEDURE Turn (on: BOOLEAN) ;
BEGIN
  IF on
  THEN
    (* turn LED on *)
    ASM VOLATILE ("cbi 8,5");
  ELSE
    (* turn LED off *)
    ASM VOLATILE ("sbi 8,5");
  END
END Turn ;

(*
  InitLed - initialize pin 0 as an output
*)

PROCEDURE InitLed ;
BEGIN
  ASM VOLATILE ("sbi 7,5")
END InitLed ;

```

**Write flashing LED program:  
flashled.mod**

```

CONST
  Delay = 400 ;

VAR
  i, j: CARDINAL ;

```

## Write flashing LED program: flashled.mod

```

BEGIN
  InitLed ;
  Turn(FALSE) ;
  LOOP
    FOR i := 0 TO Delay DO
      FOR j := 0 TO Delay DO
        ASM VOLATILE ("nop")
      END
    END ;
    Turn(TRUE) ;
    FOR i := 0 TO Delay DO
      FOR j := 0 TO Delay DO
        ASM VOLATILE ("nop")
      END
    END ;
    Turn(FALSE)
  END
END flashled.

```

## Compile and link code

```

$ avr-gcc -mmcu=atmega328 flashled.mod -flibs=min -o flashled.elf
$ avr-objcopy -R .eeprom -O ihex flashled.elf flashled.hex

```

## Link up USB programmer to circuit

```

$ sudo avrdude -p m328p -U lfuse:w:0xe2:m -U hfuse:w:0xda:m
-U efuse:w:0x05:m -c stk500v2 -e -v -U flash:w:flashled.hex

```

## Link up USB programmer to circuit

- watch out for microprocessor part numbers, there exist 328p, 328p-pu
  - which are nearly identical, the (328p-pu) has newer power saving internal circuitry and critically a different device signature
- you will need to modify `/etc/avrdude.conf` to reflect this
  - copy the 328p section and change the signature (ymm!)